




Choptank Fiber Equipment Instructions


Logging in to your Gateway

1. Connect to the Gateway by typing 192.168.1.1 into your internet browser.
2. Enter your username and password created during your in-home installation.
3. Once in you will see the screen below.

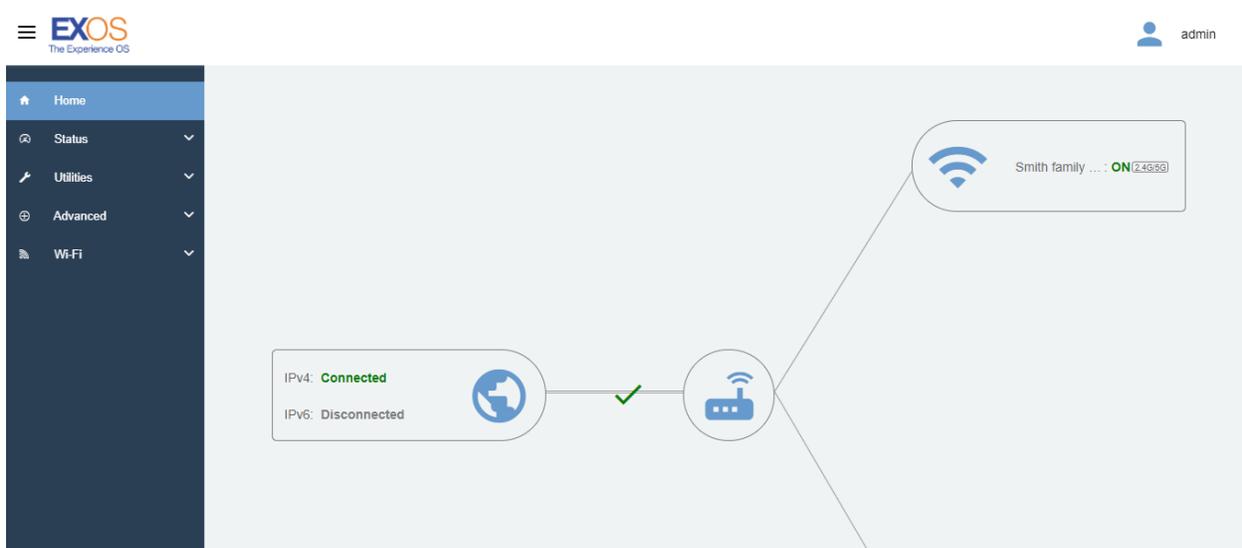


Changing your Wi-Fi SSID and password

1. Click the Wi-Fi arrow to enter the drop-down menu.

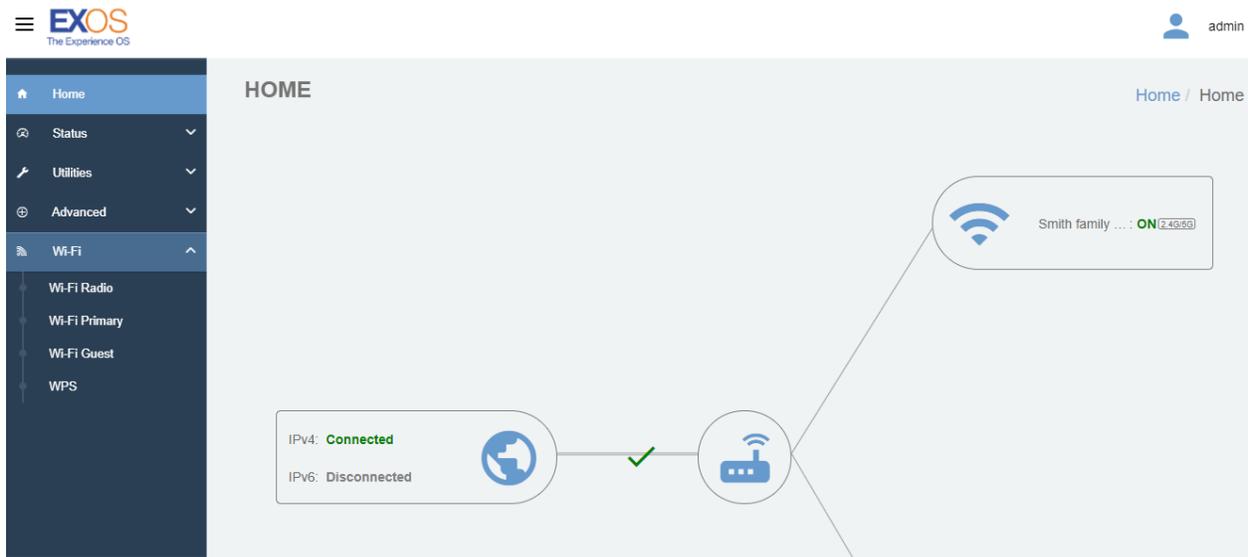


2. Select Wi-Fi Primary. This screen will allow you to change your network name or SSID, and the Wi-Fi password.

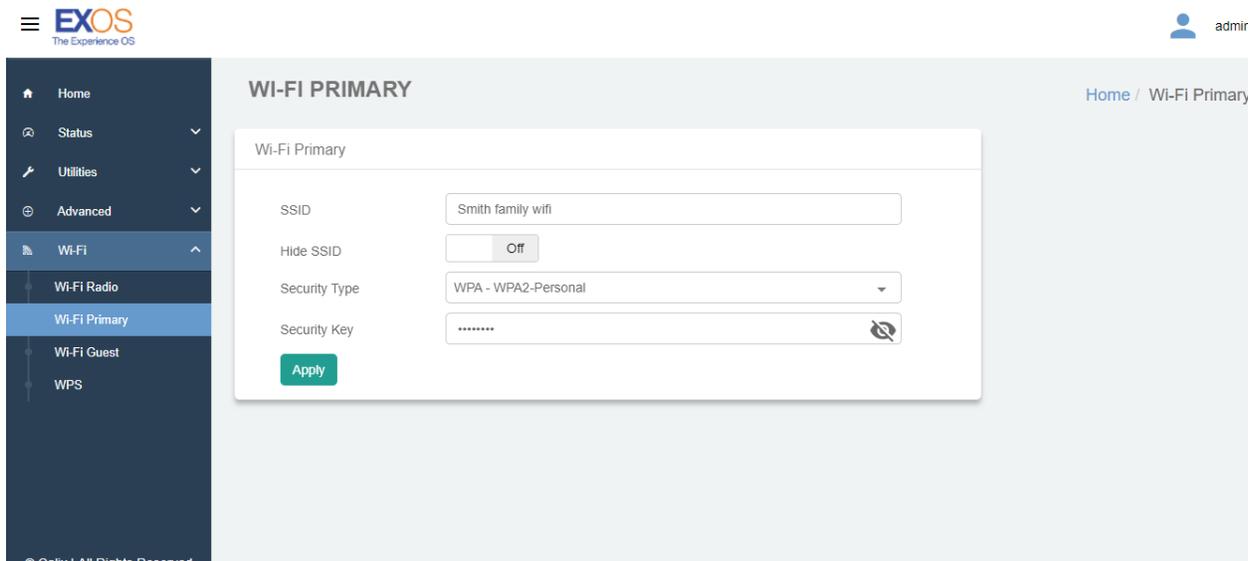


Adding guest Wi-Fi permission

1. Click the Wi-Fi arrow to enter the drop-down menu.

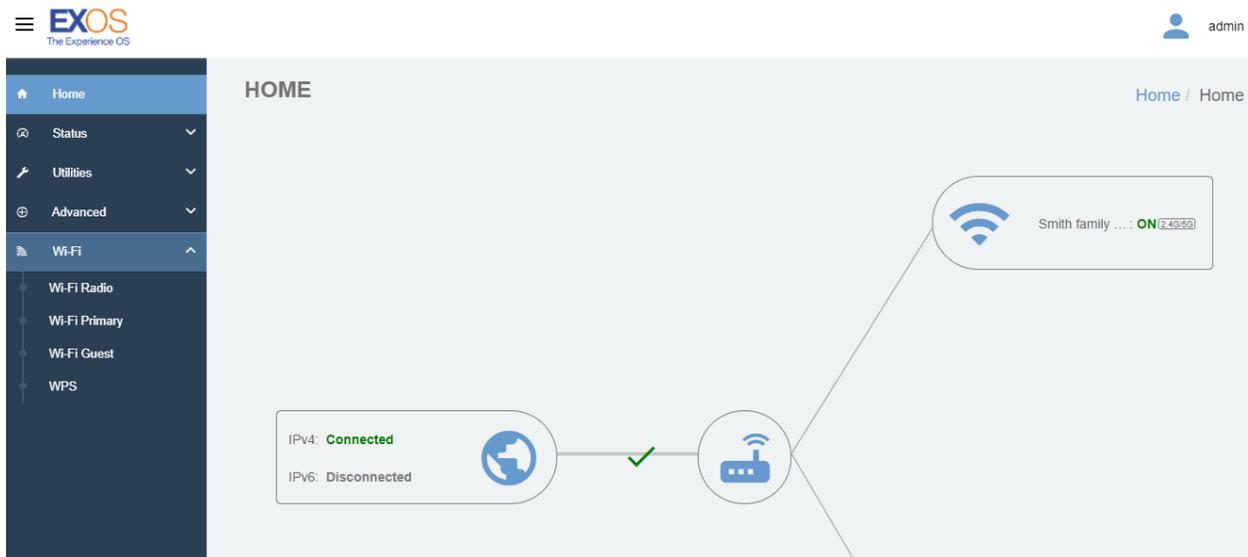

2. Select Wi-Fi Guest. Click the Create Guest Wi-Fi button.

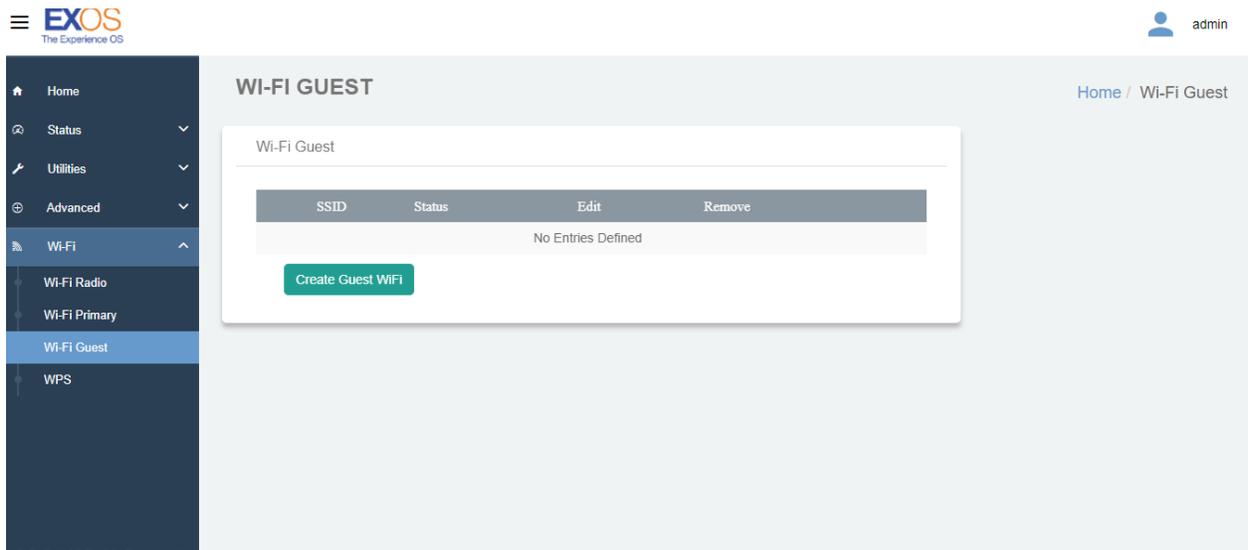


3. Select Wi-Fi Guest parameters and apply.


The screenshot shows the EXOS (The Experience OS) management interface. On the left is a dark blue sidebar with a menu containing: Home, Status, Utilities, Advanced, Wi-Fi (expanded), Wi-Fi Radio, Wi-Fi Primary, Wi-Fi Guest (selected), and WPS. The top right corner shows a user profile icon labeled 'admin'. The main content area is titled 'WI-FI GUEST' and contains a configuration form with the following fields: 'Event' (dropdown menu, value: -- not set --), 'SSID' (dropdown menu, value: -- not set --), 'Security type' (dropdown menu, value: WPA - WPA2-Personal), 'Security Key' (text input field with a copy icon), 'Schedule' (two date pickers with a tilde symbol between them), and 'Subnet' (checkbox, value: Off). At the bottom of the form are two buttons: 'Apply' and 'Back'. The breadcrumb 'Home / Wi-Fi Guest' is visible in the top right of the main area.

Changing the Gateway username and password.

1. From the Home screen, click on the Advanced arrow to enter the drop-down menu. Select Security.

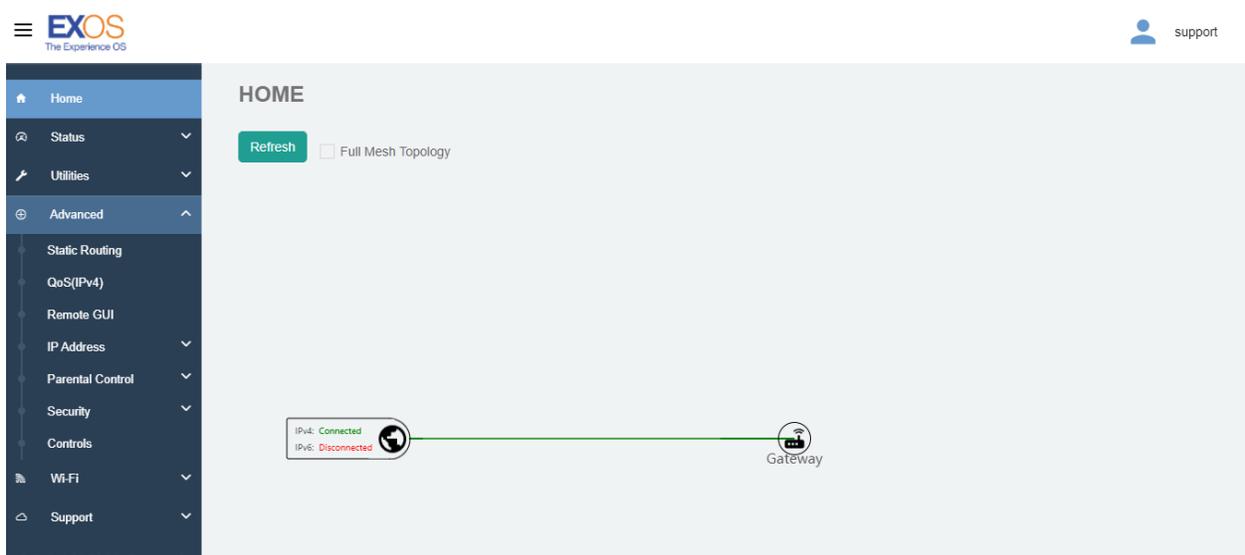

2. Next, select Credentials. The Administrator Credentials page will allow you to change the username and password to access the Gateway.

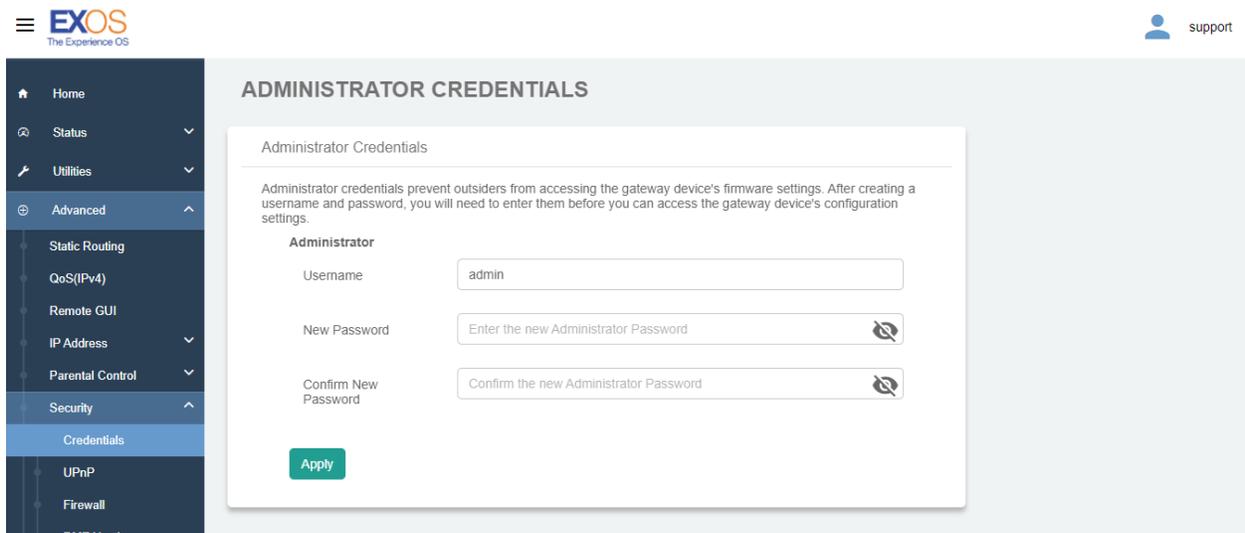

Connecting devices to your network.

1. If your devices allow it, you can use the Wi-Fi Protected Setup (WPS) button on the back of your Gateway to securely connect your devices to your network without having to login.
2. Your device will give instructions, but as a rule, you will hold the WPS button down on your device for 3 seconds. Then you will hold the WPS button down on the Gateway for three seconds.
3. If using a WPS button is not an option, you will need to connect to your network through your device. Locate the Wi-Fi settings in your device, select the network name, and enter the network password (see Changing Your Wi-Fi SSID and Password from above)

